

FIG.1

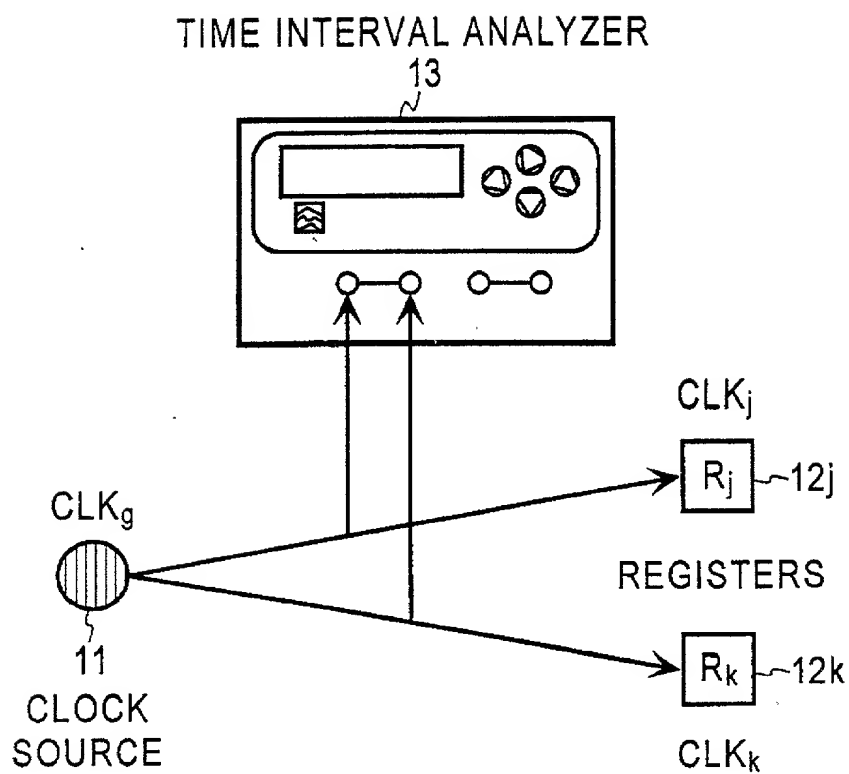


FIG.2

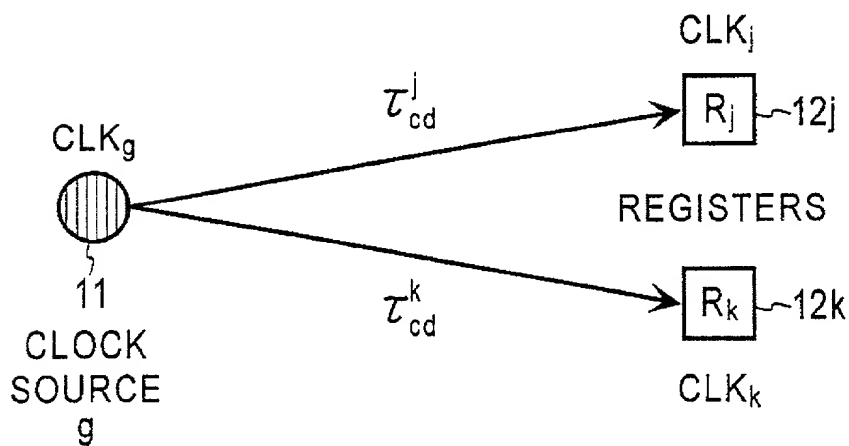


FIG.3

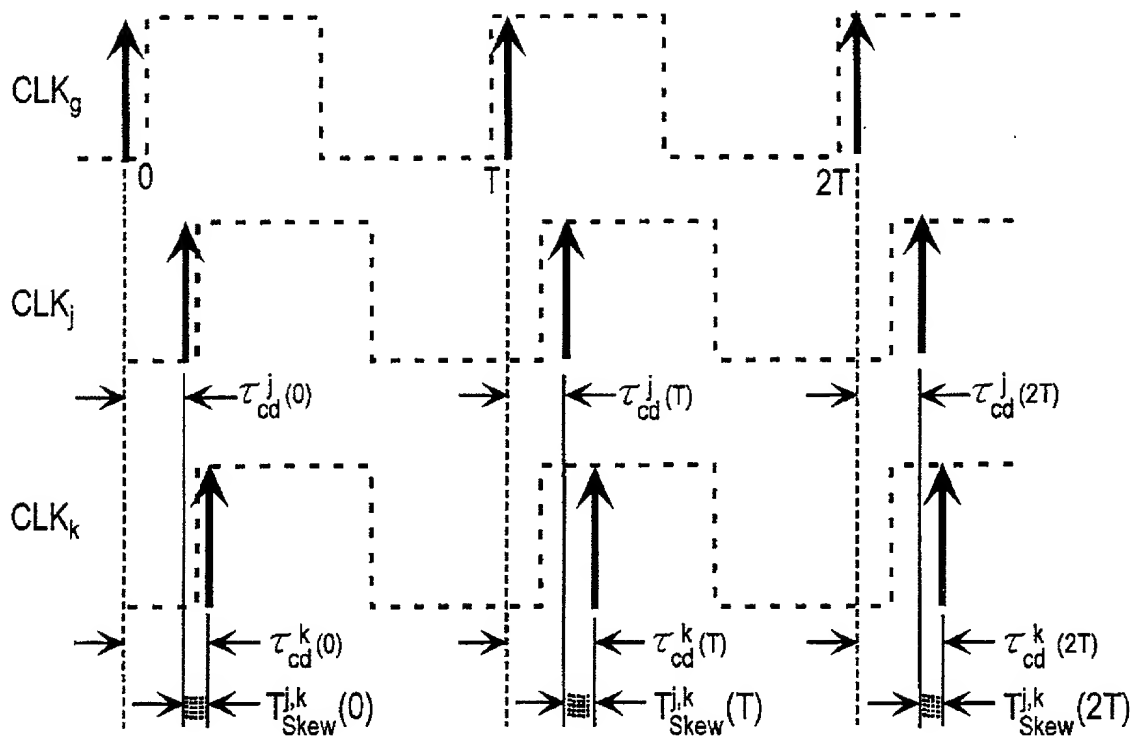


FIG.4

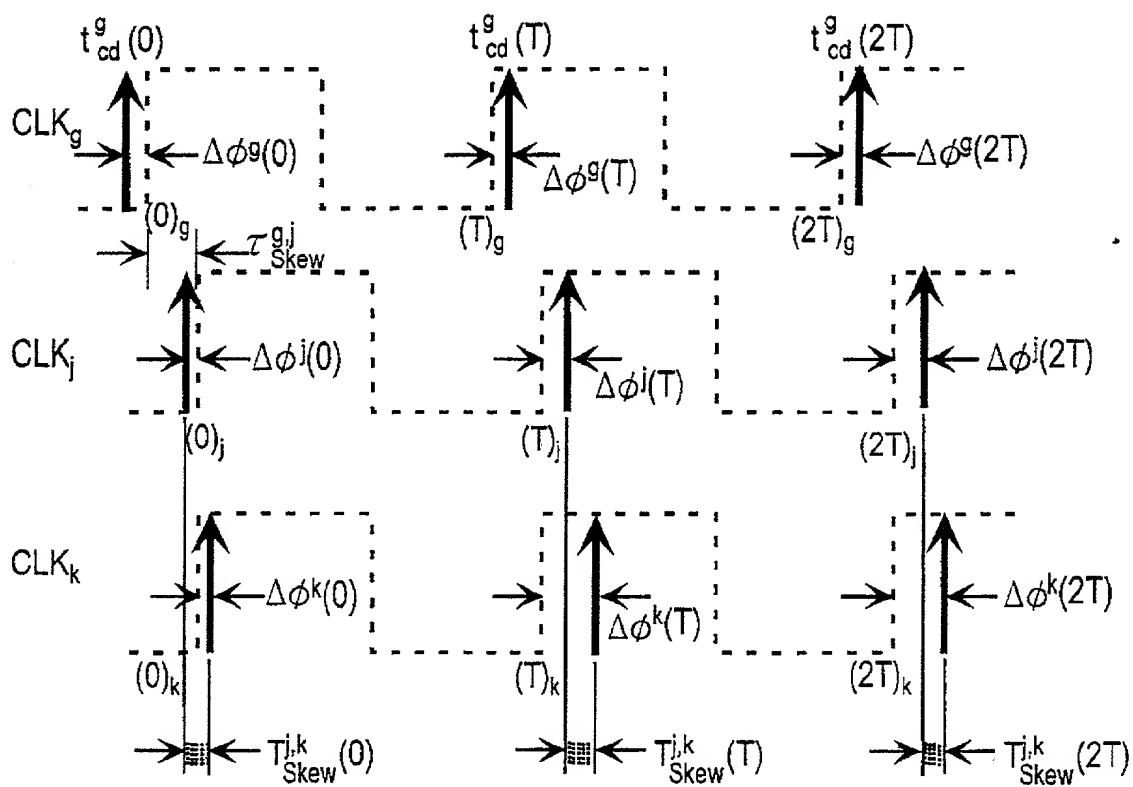


FIG. 5A

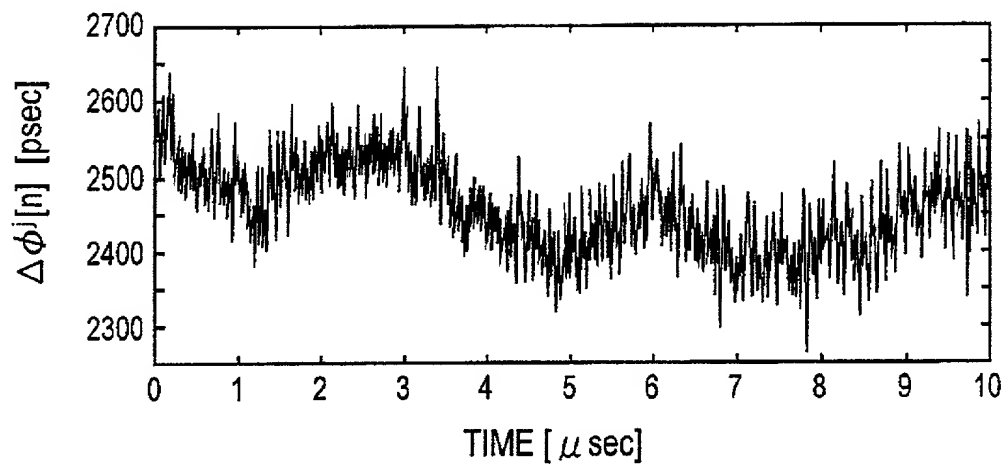


FIG. 5B

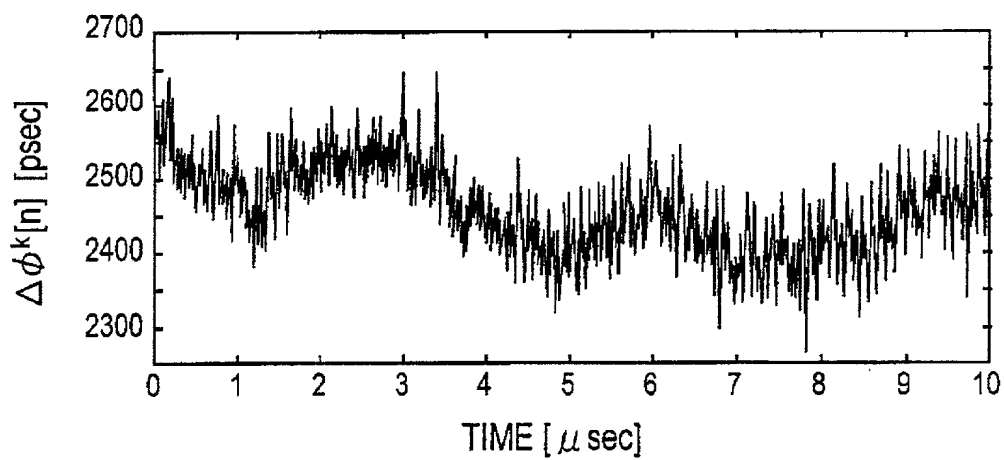


FIG. 6

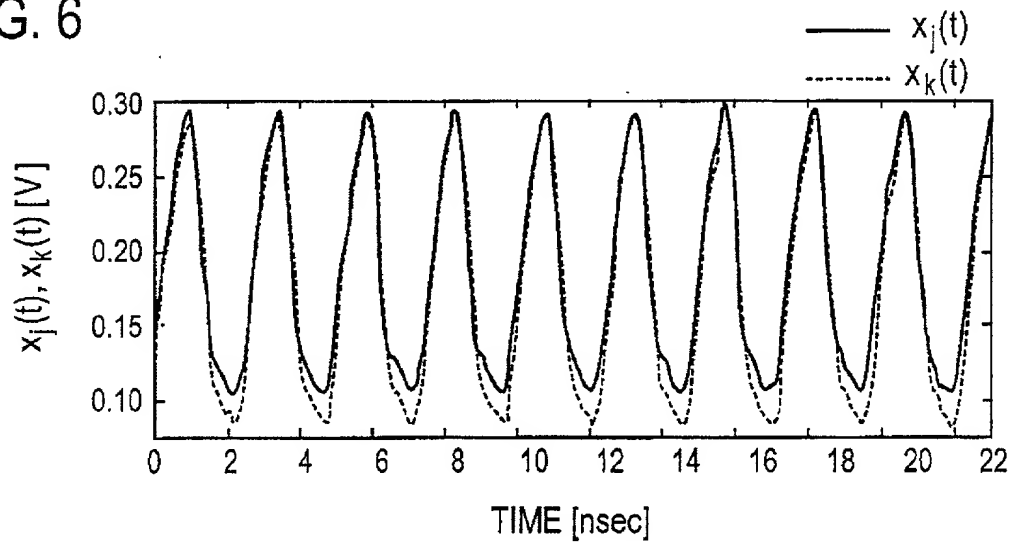


FIG. 7

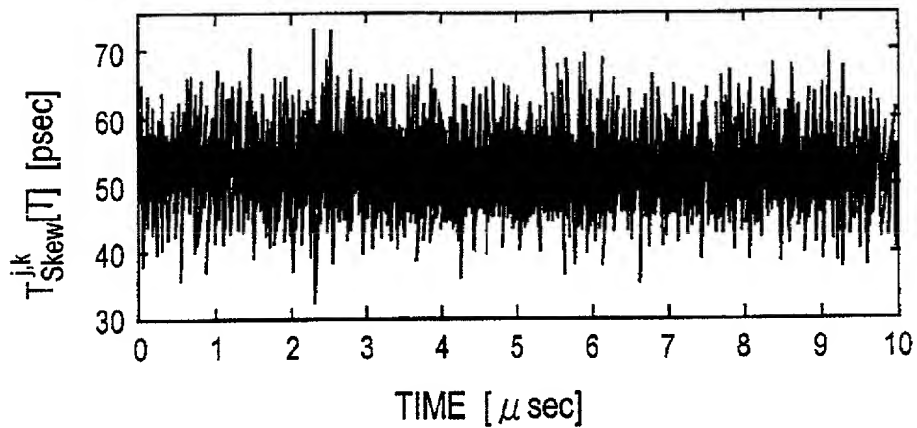


FIG. 8

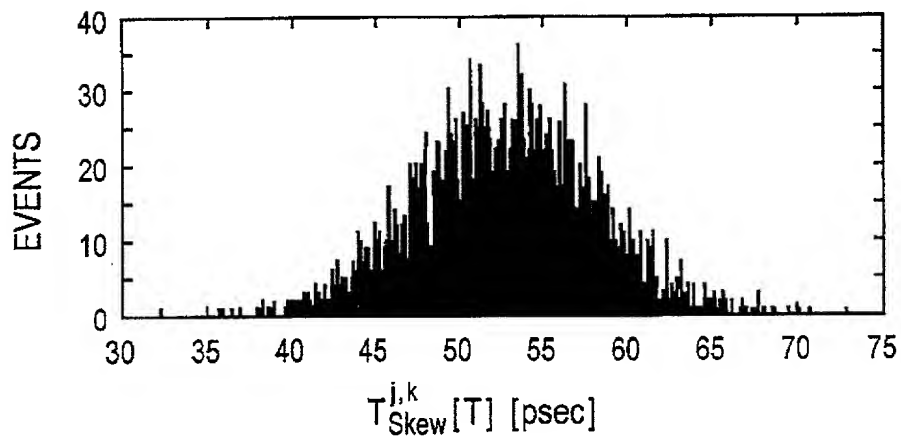


FIG. 9

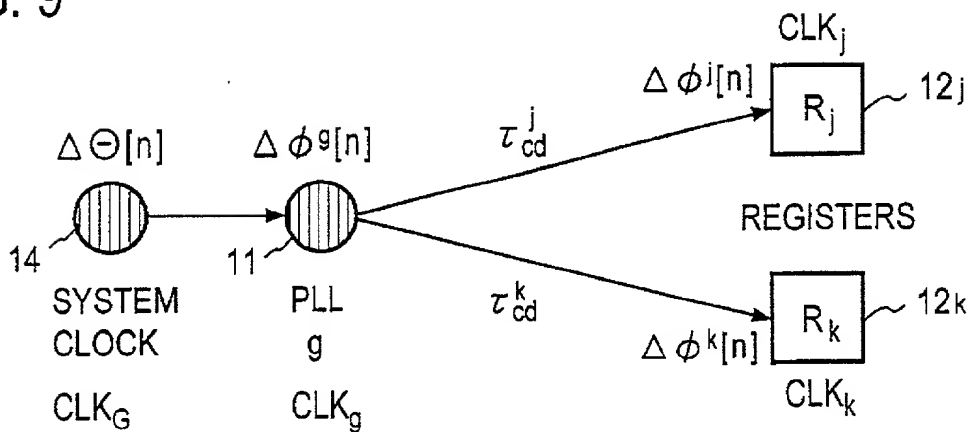


FIG.10

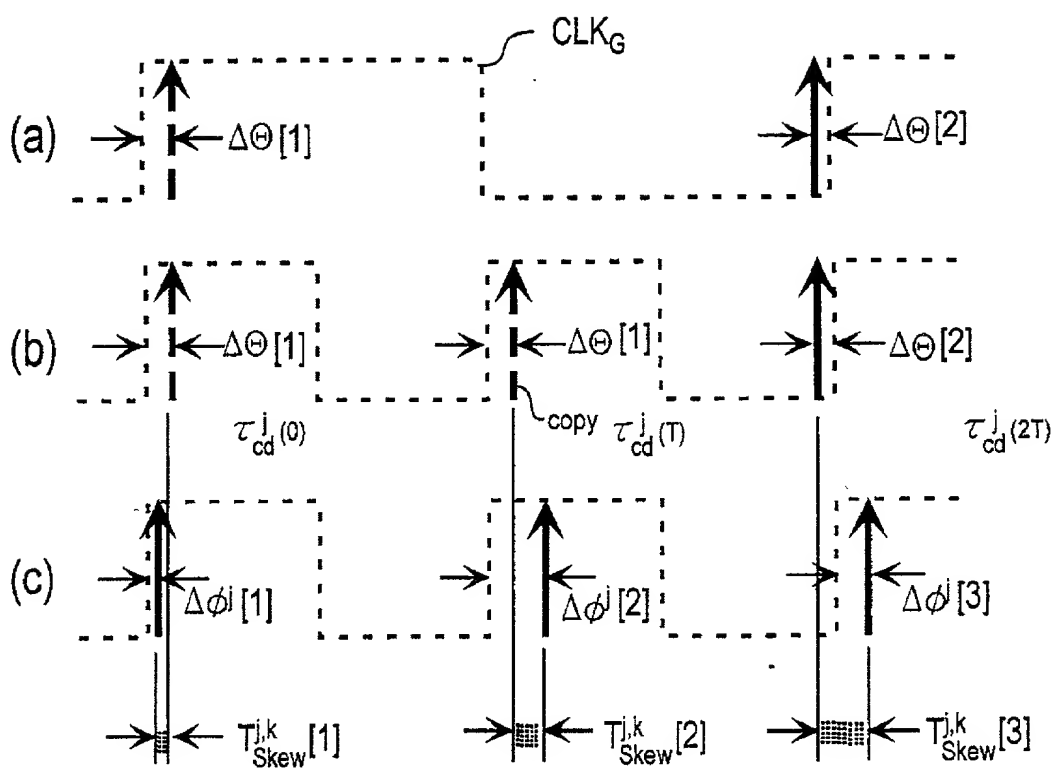


FIG. 11

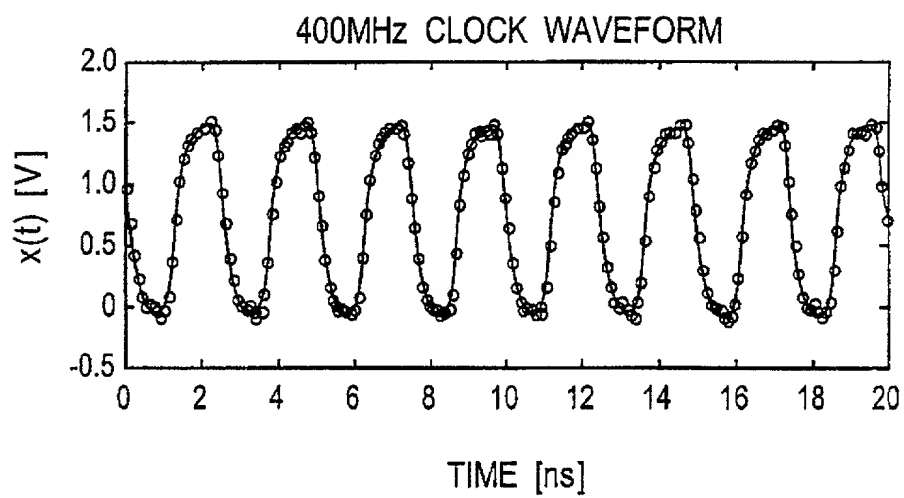


FIG. 12A

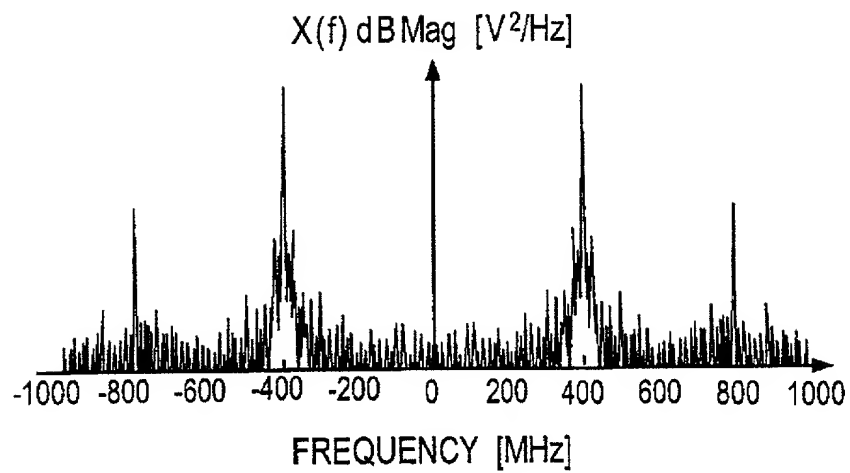
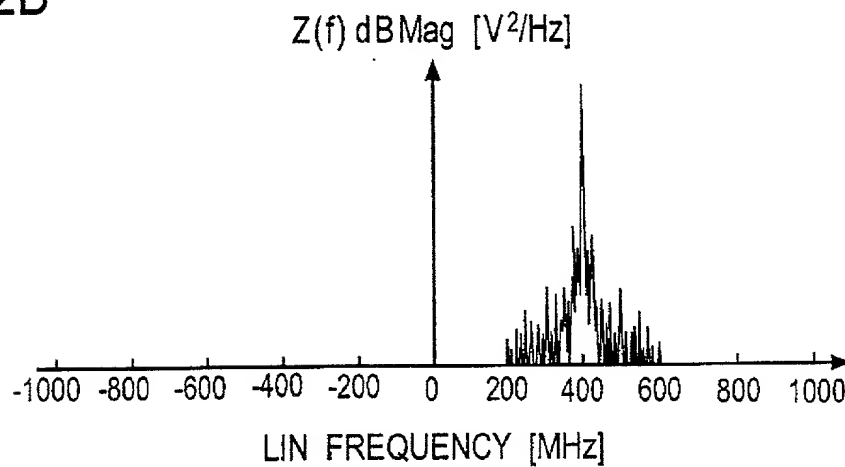


FIG. 12B



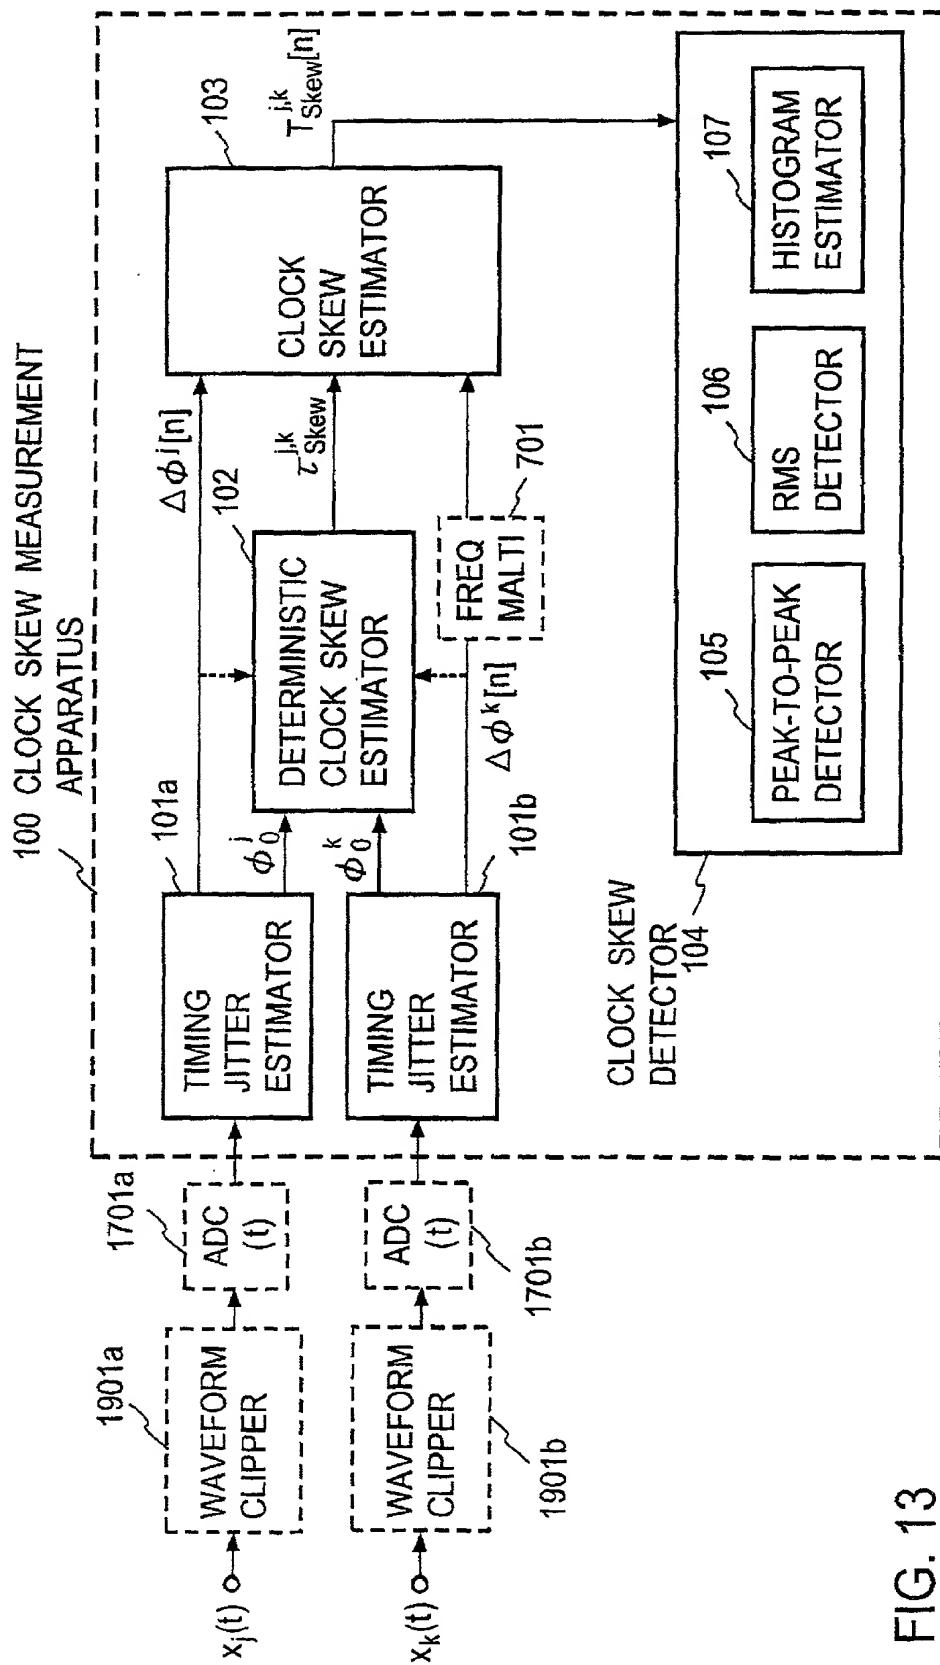


FIG. 13

FIG. 14

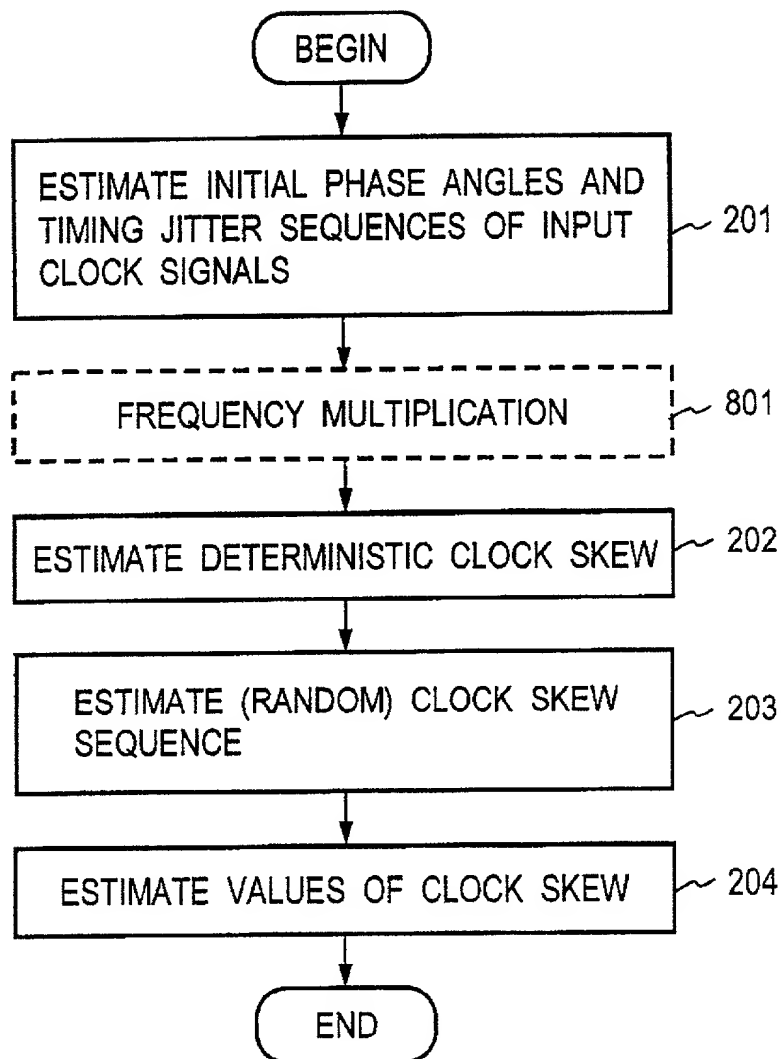


FIG.15

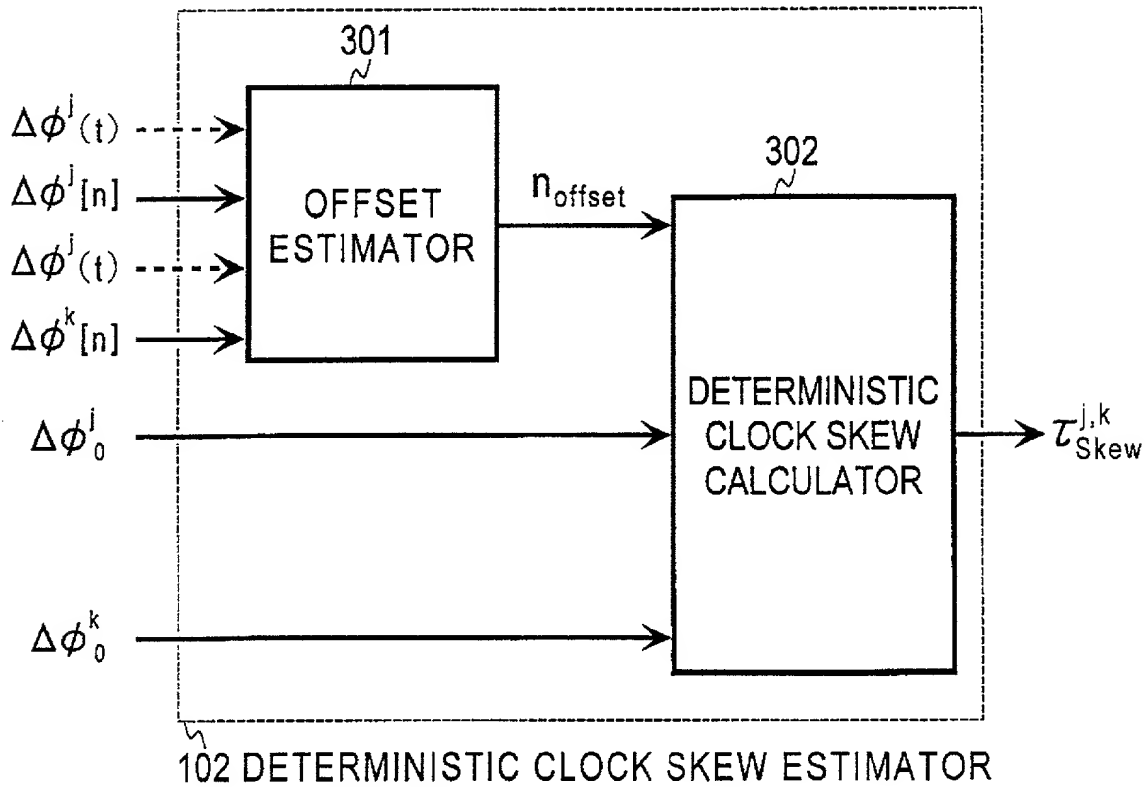
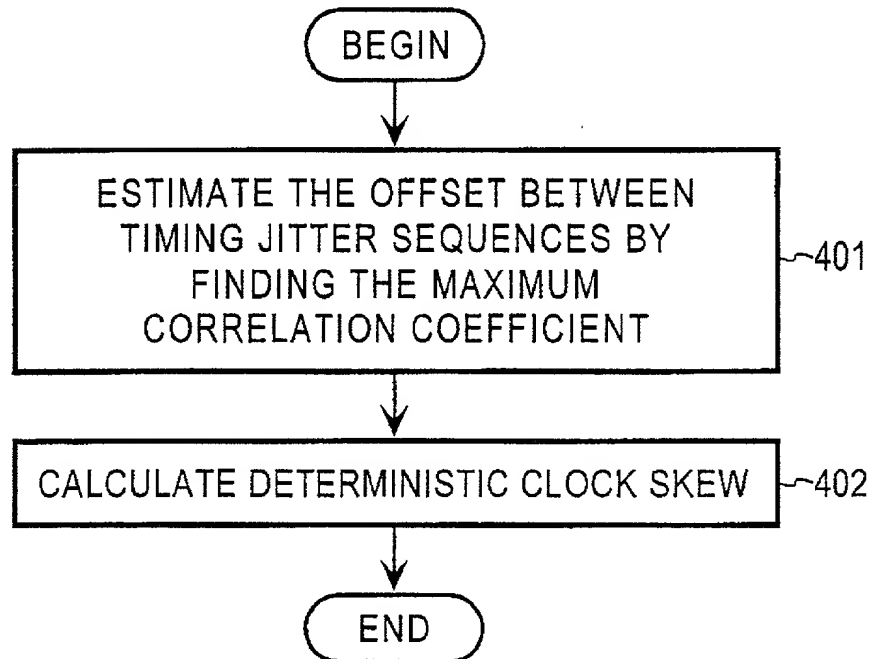


FIG.16




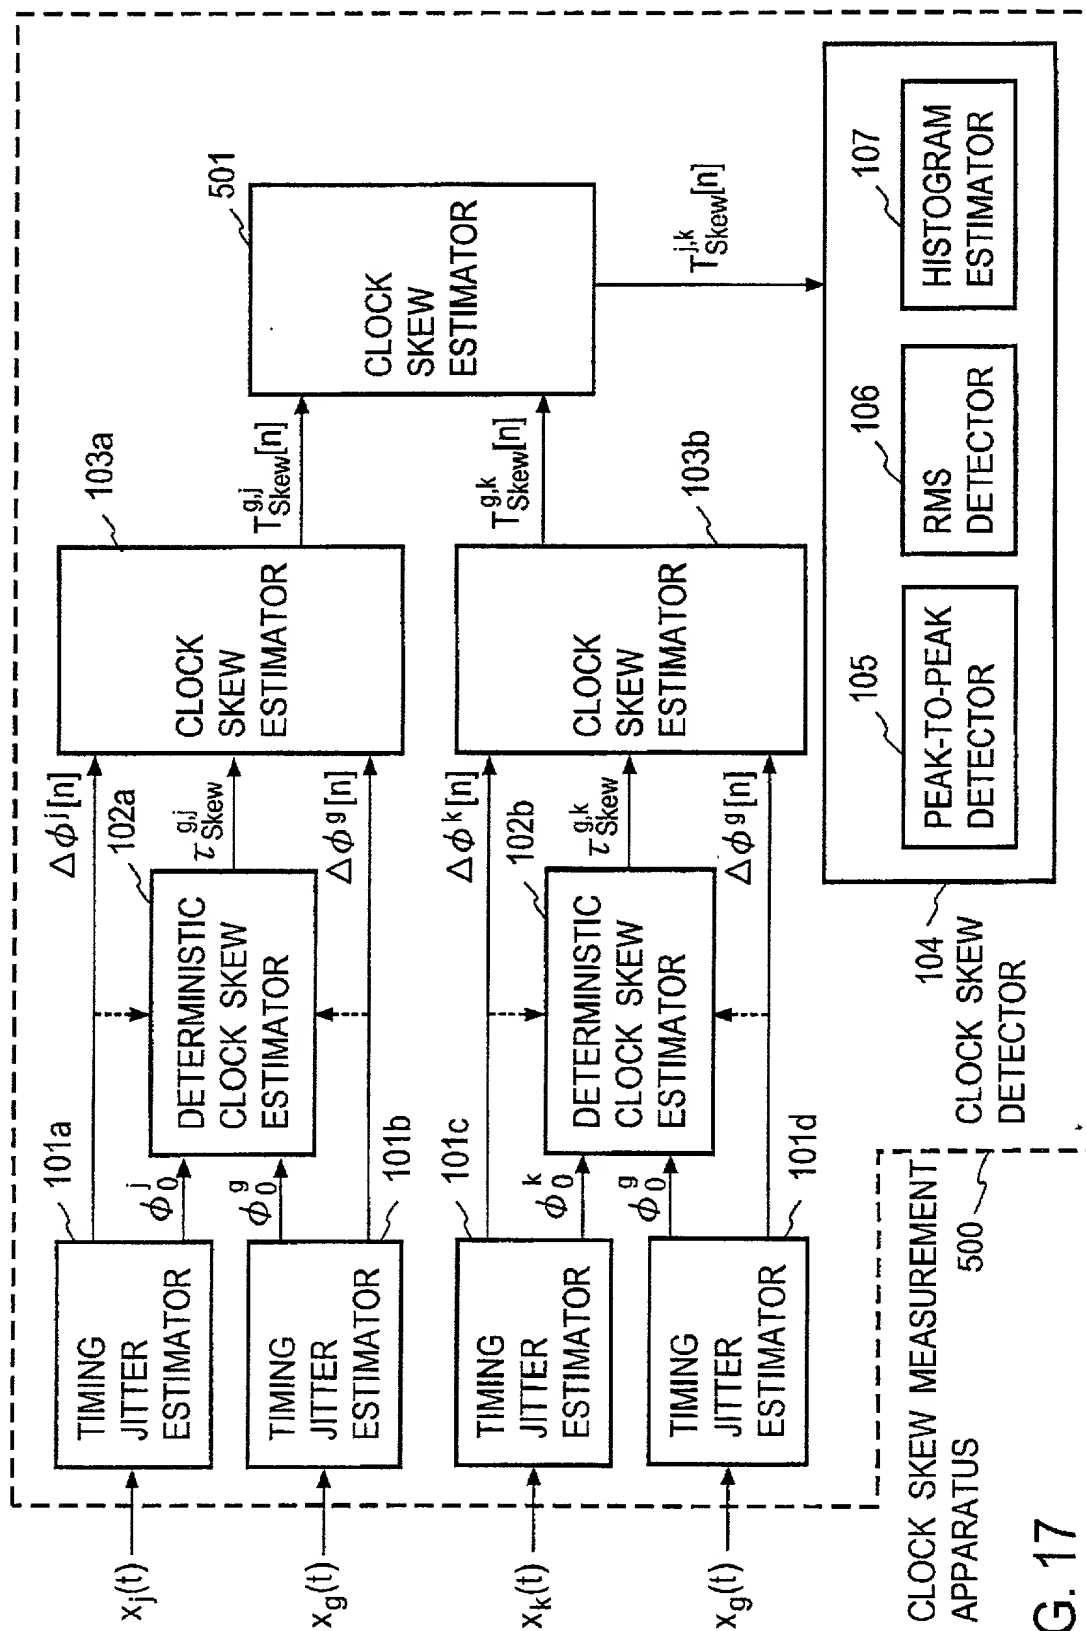


FIG. 17

FIG. 18

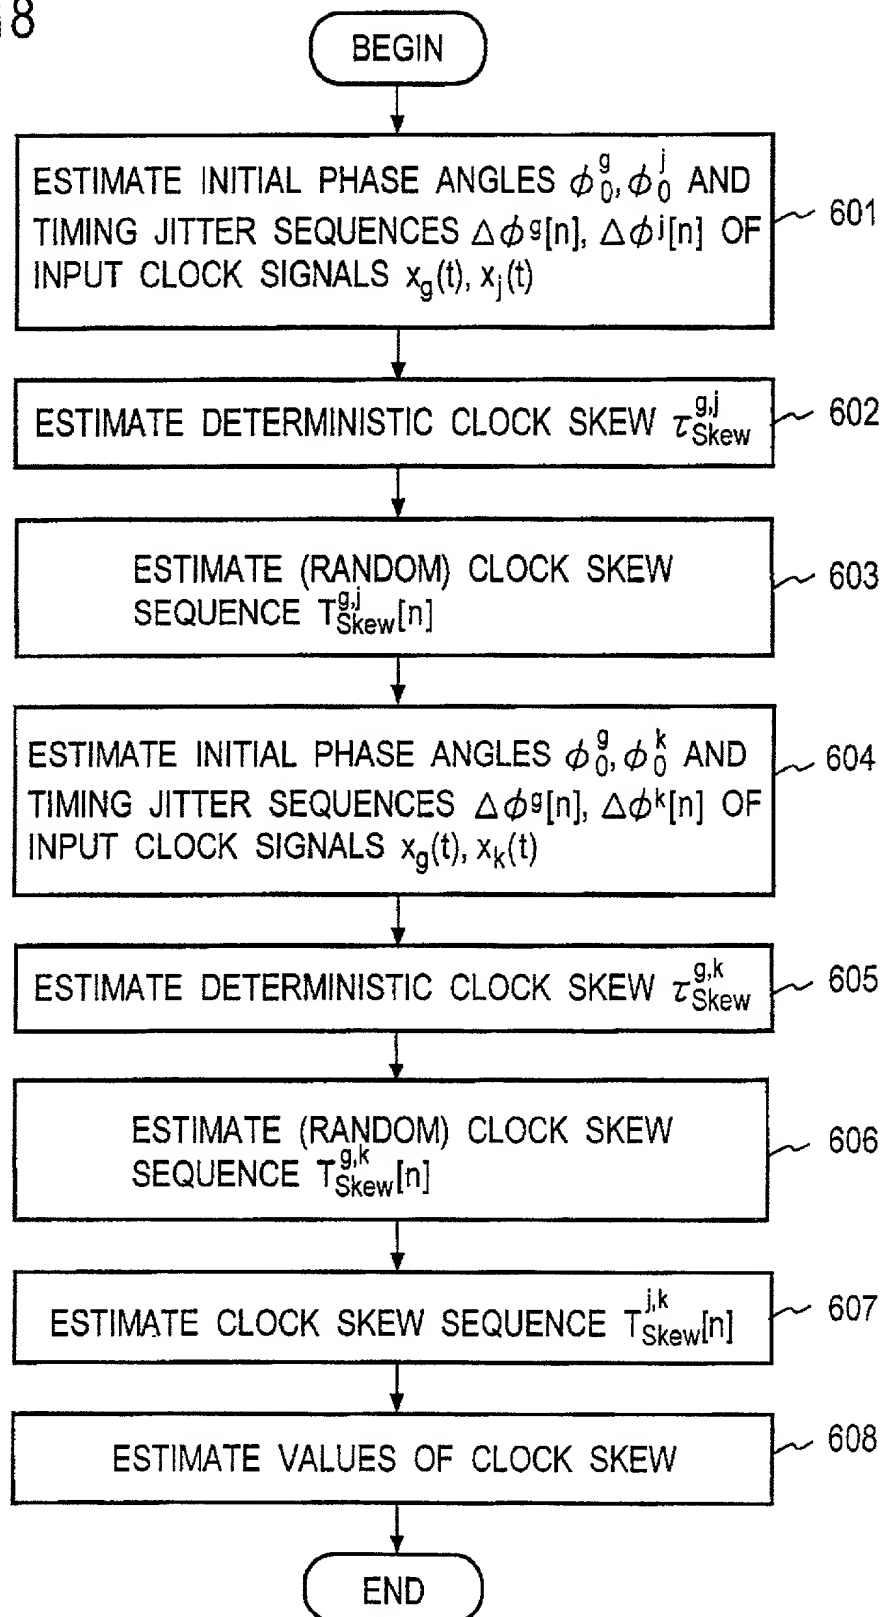

900 TIMING JITTER ESTIMATOR

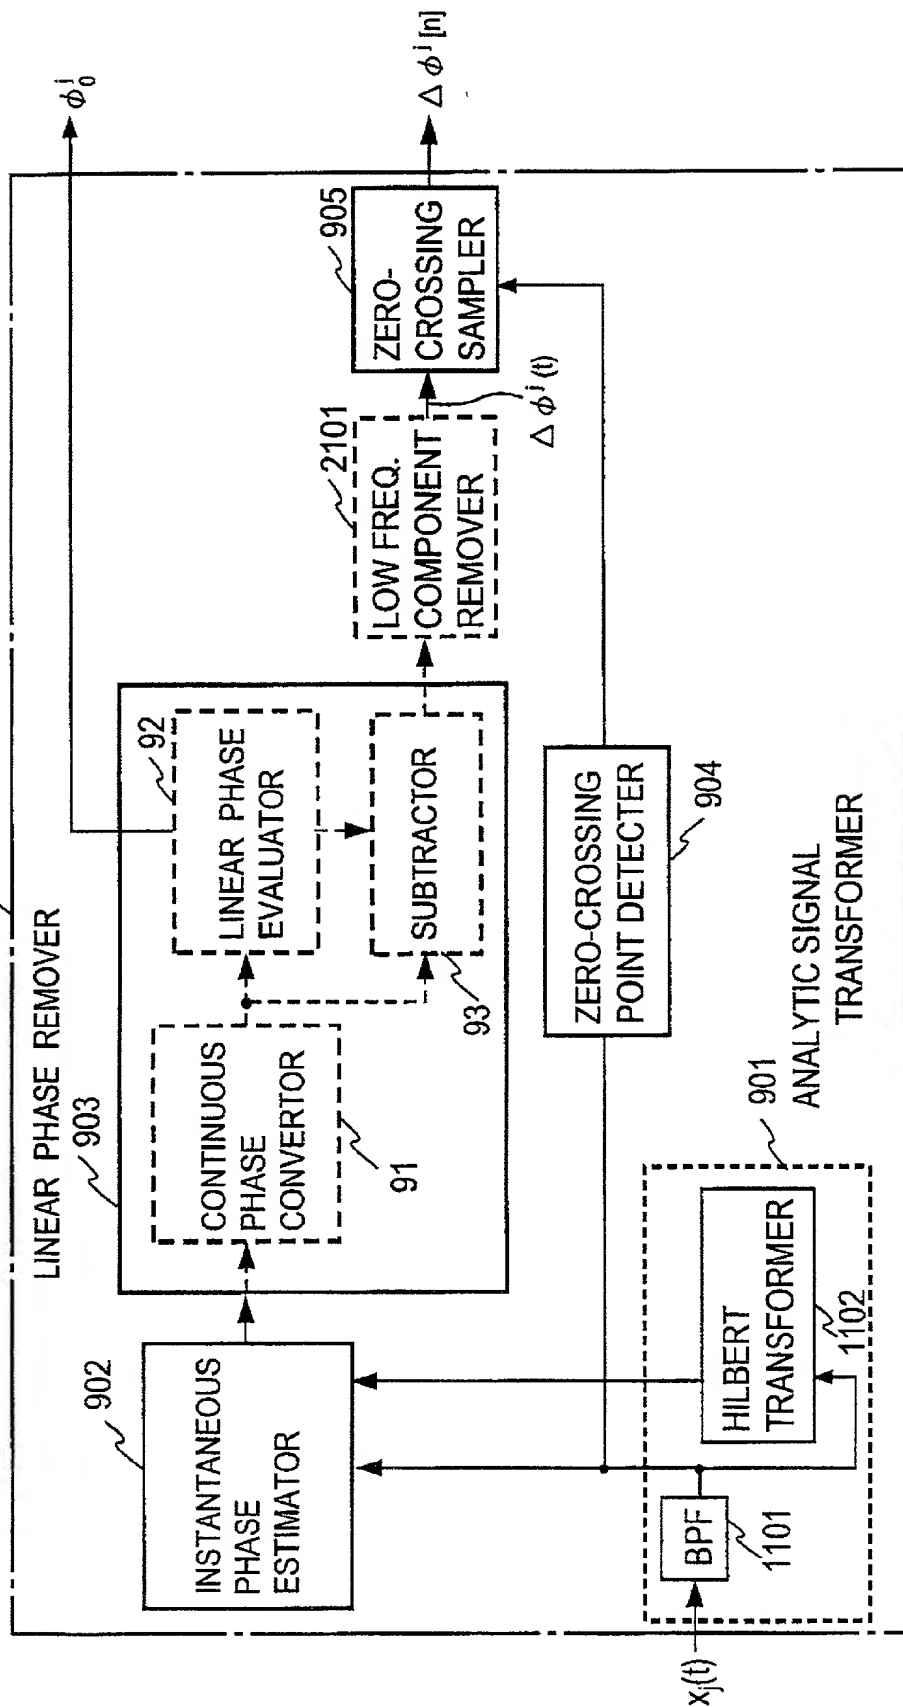


FIG. 19

FIG. 20

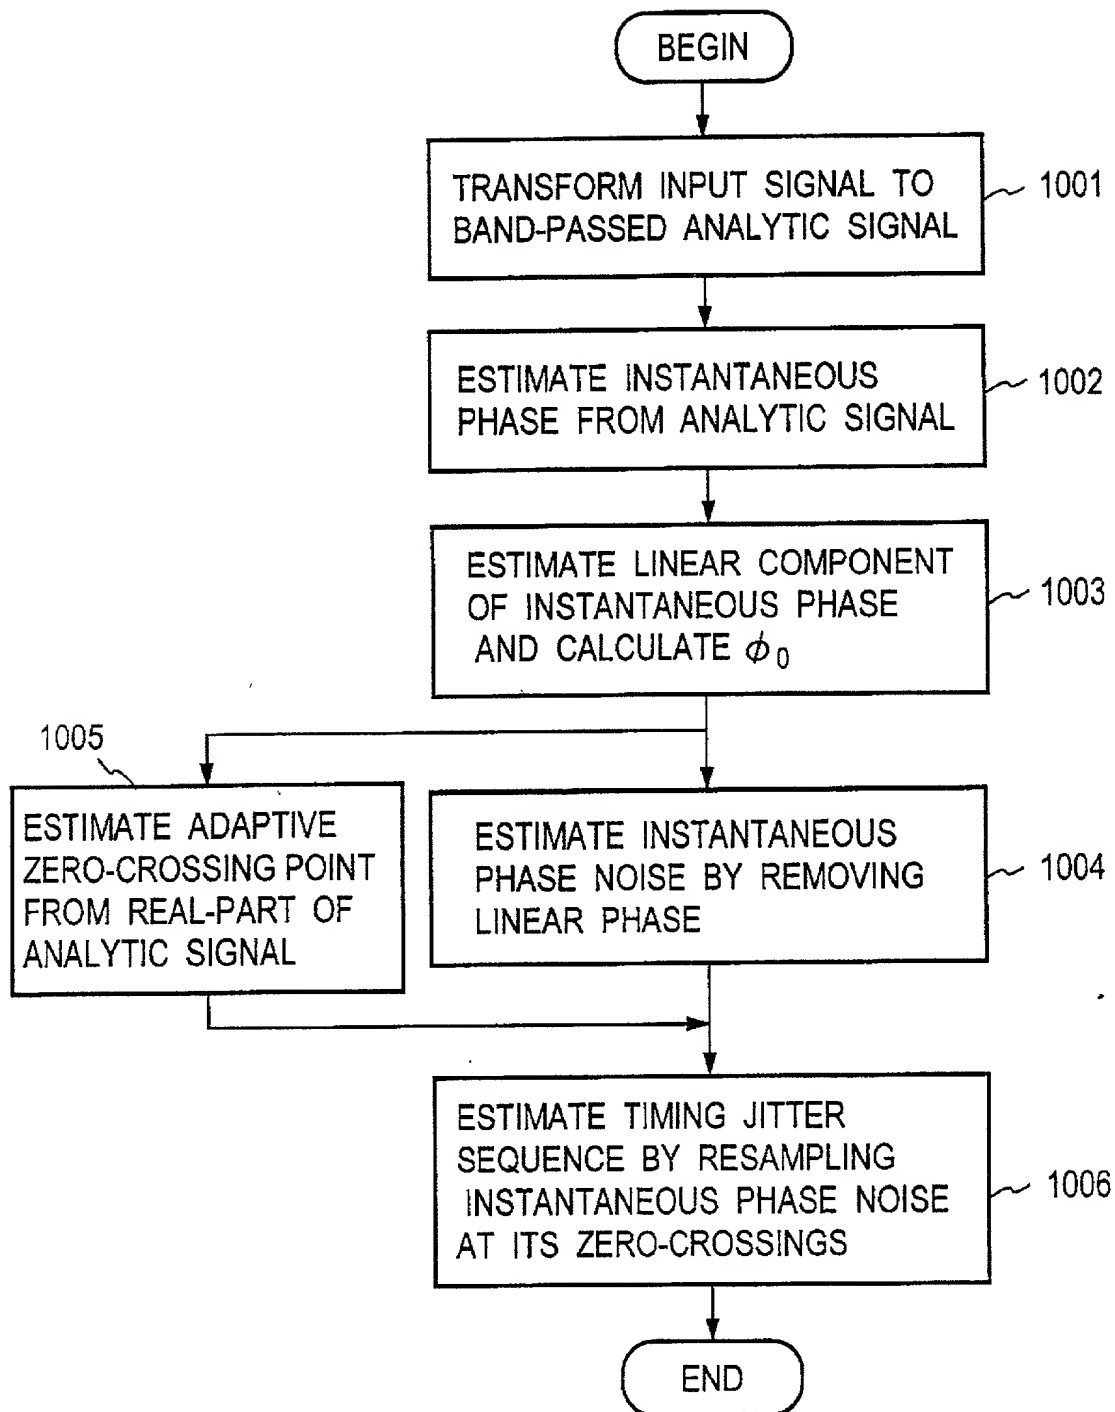


FIG.21

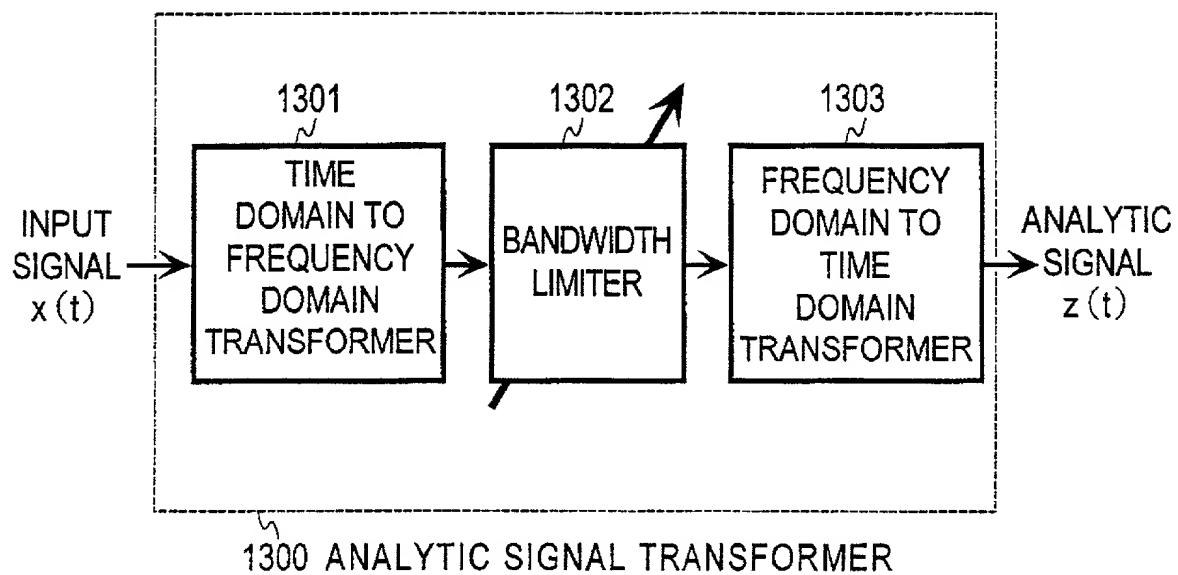


FIG.22

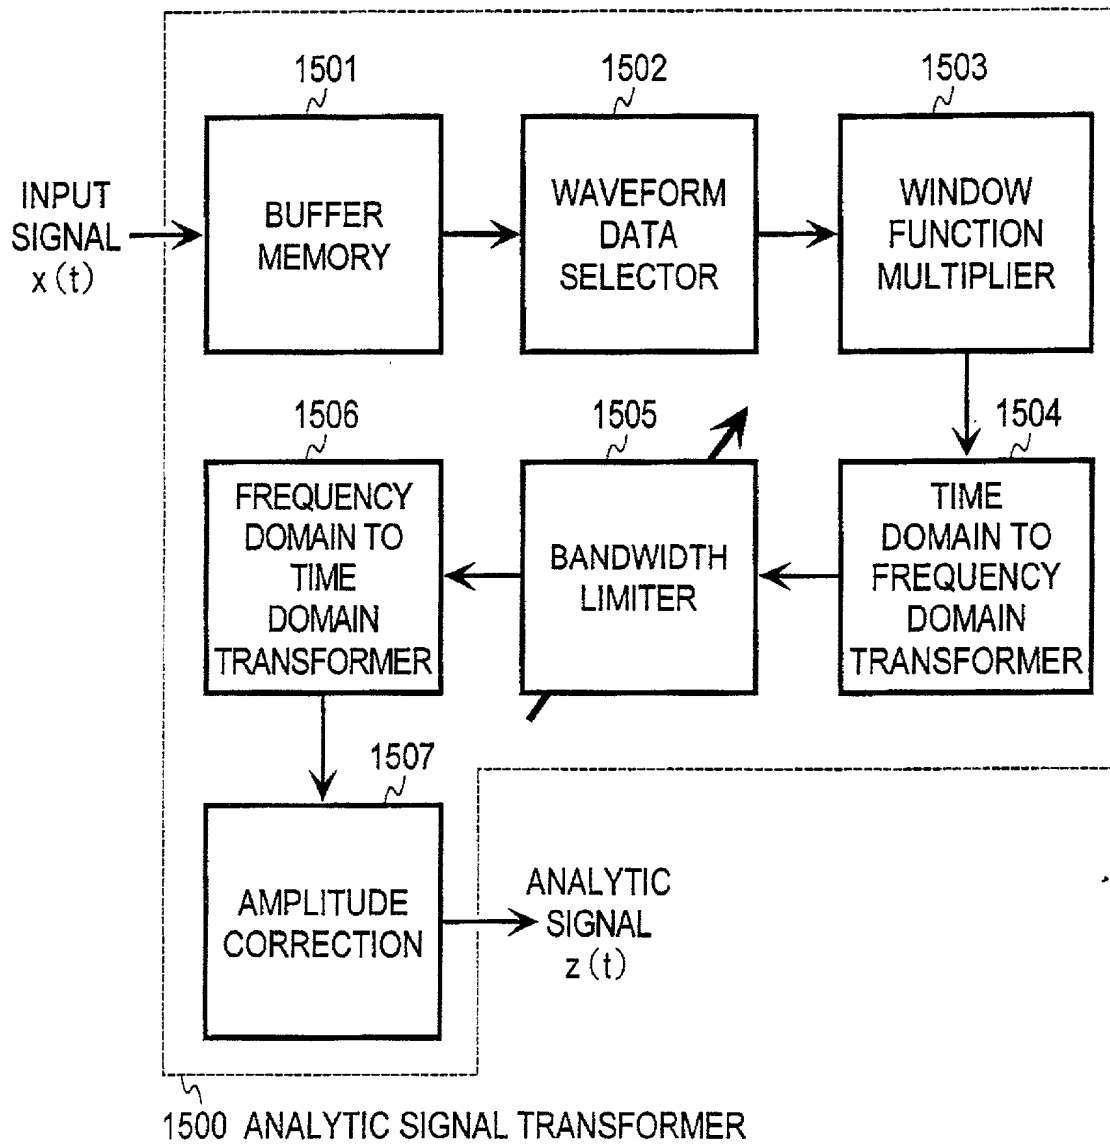


FIG. 23

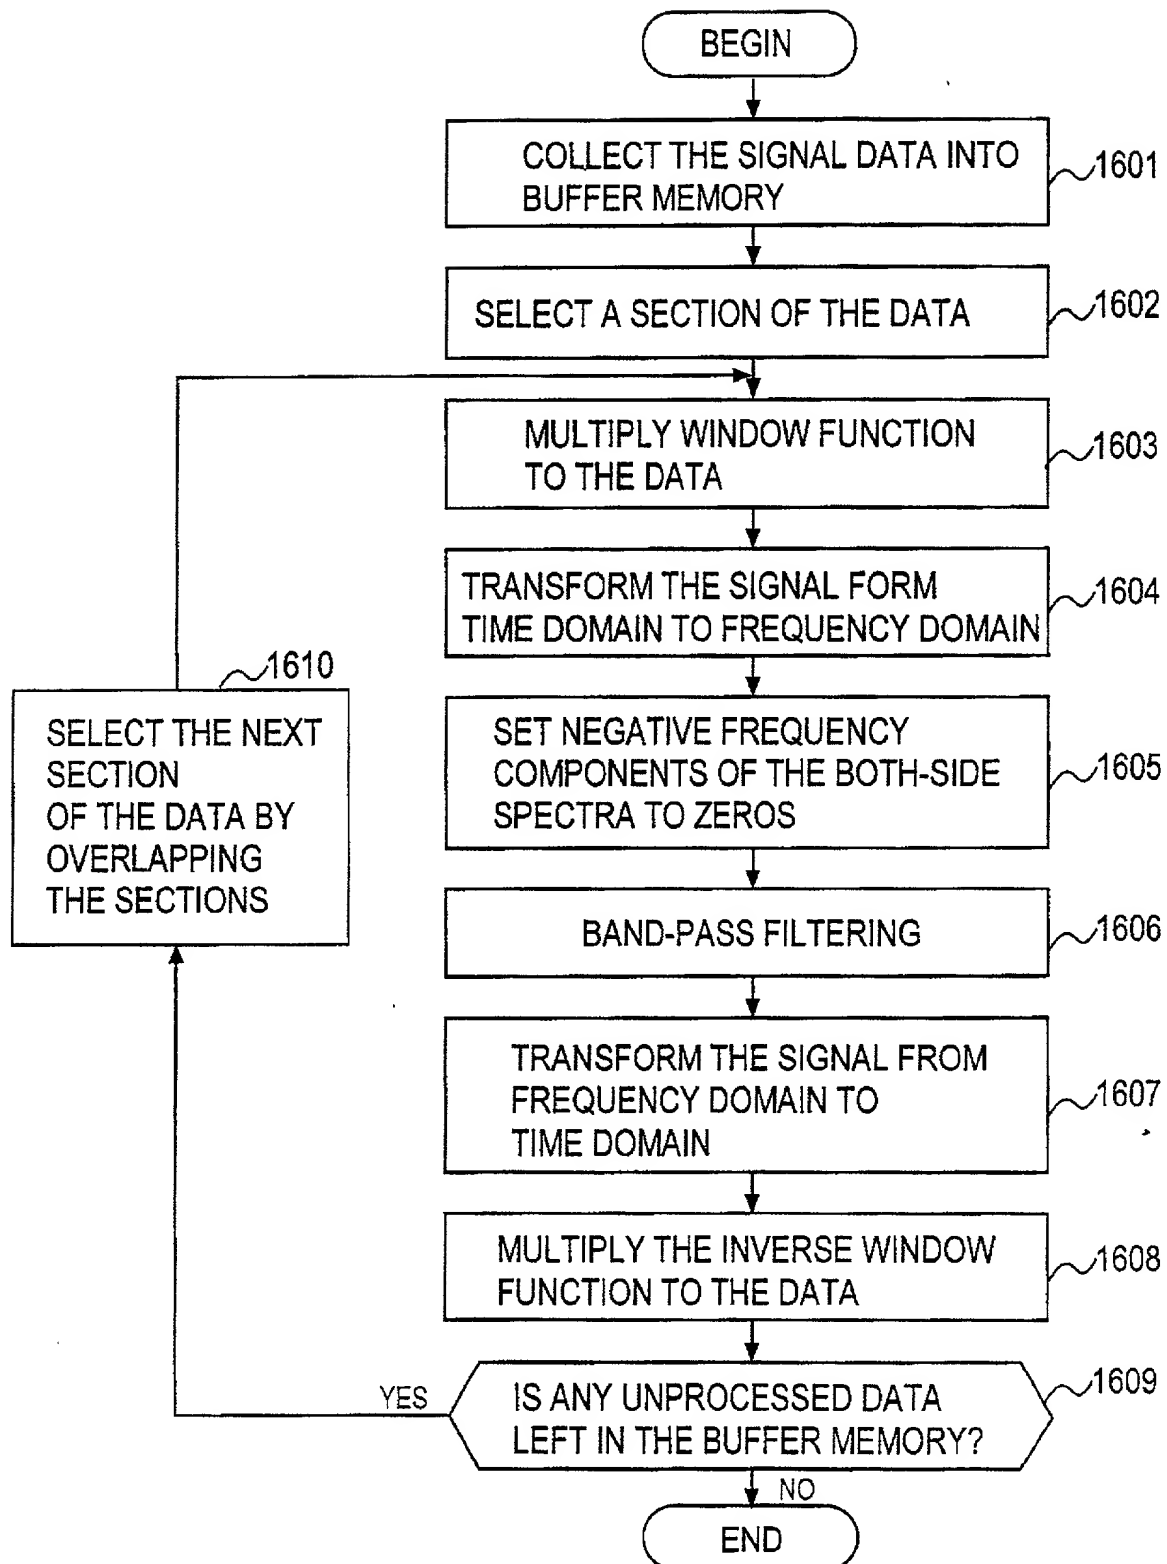


FIG. 24

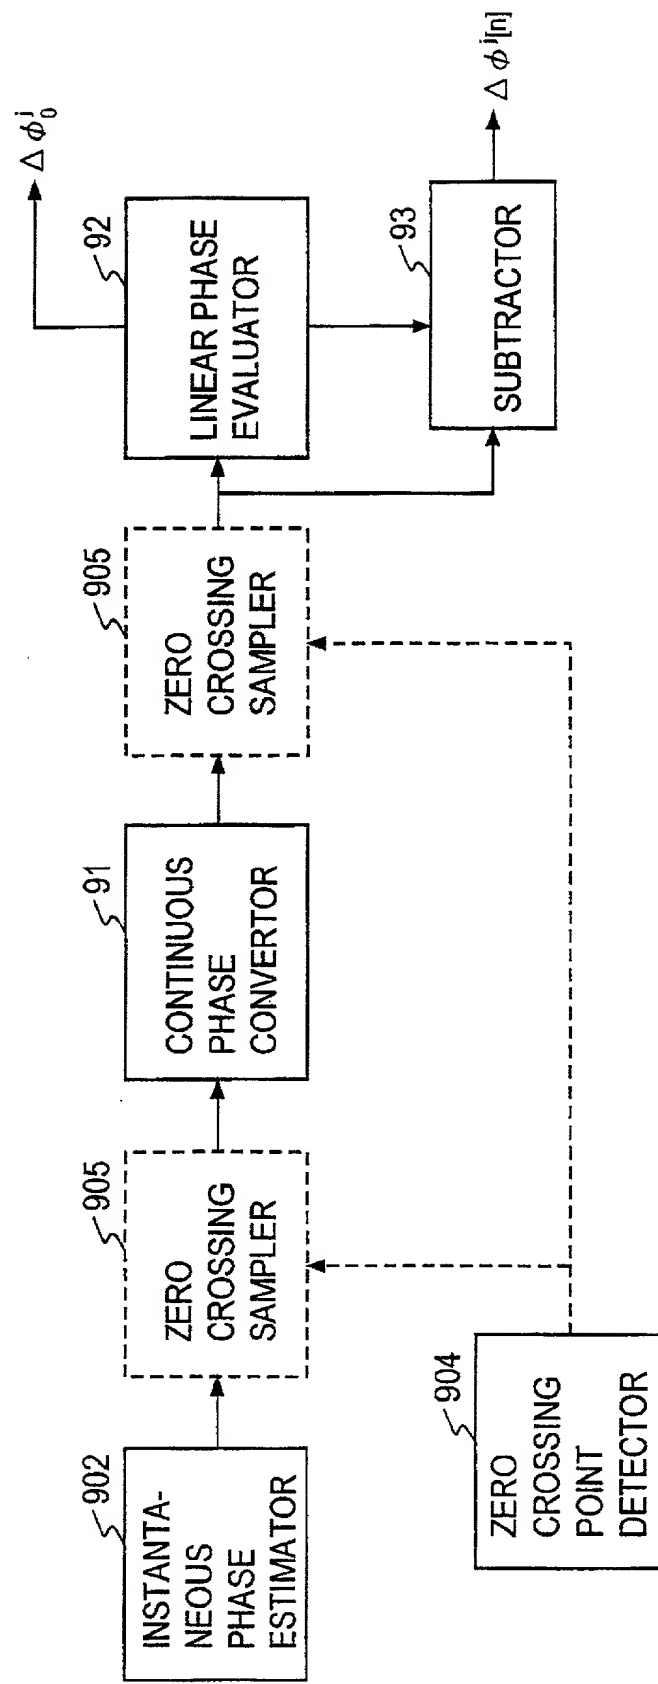


FIG. 25

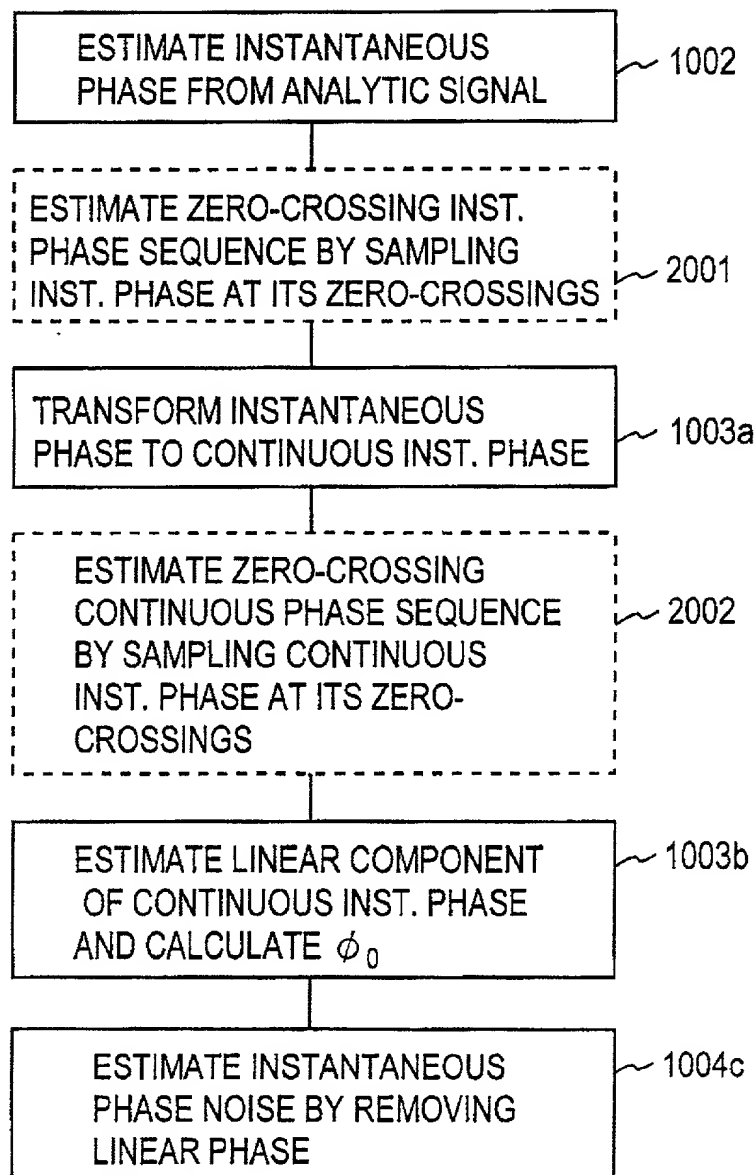


FIG. 26

